


THE SIDE SWITCH

THE SIDE SWITCH IS A HANDY LITTLE BUTTON WITH TWO FUNCTIONS. THE FOLLOWING DETAILS HOW IT CAN BE USED

THE SIDE SWITCH IS LOCATED ON THE **RIGHT SIDE** OF THE IPAD, JUST ABOVE THE VOLUME SWITCH. IT HAS TWO POSITIONS **ON** AND **OFF**.

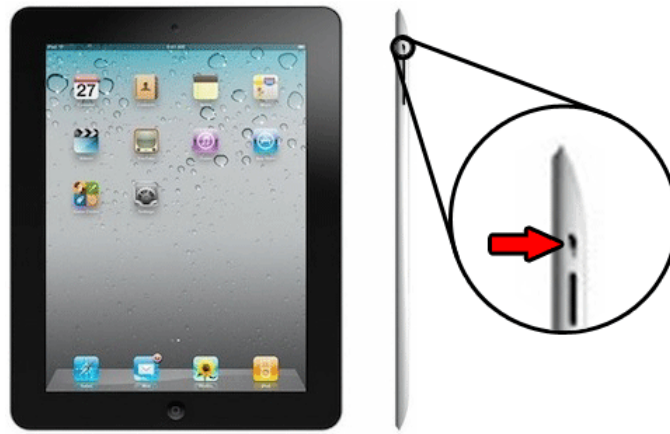

FUNCTION 1: LOCK SCREEN ROTATION

DEPENDENT ON WHETHER YOU HOLD THE SCREEN VERTICALLY, OR HORIZONTALLY, THE SCREEN WILL ROTATE TO FIT. SOMETIMES, YOU MAY WISH TO LOCK THE SCREEN IN ITS VERTICAL OR HORIZONTAL POSITION



Note: THE SCREENS POSITION CAN ALSO BE DESCRIBED AS **PORTRAIT** OR **LANDSCAPE**

FUNCTION 2: MUTE

THE SIDE SWITCH CAN ALSO BE USED AS A QUICK WAY TO TURN OFF THE SOUND AND MUTE THE IPAD. IT WILL REMAIN MUTED UNTIL YOU TURN THE SWITCH OFF

THE SIDE SWITCH

THE SIDE SWITCH IS A HANDY LITTLE BUTTON. THE FOLLOWING DETAILS HOW IT CAN BE USED


STEP 1:

TO SET UP EITHER OF THESE FUNCTIONS, SIMPLY GO TO **SETTINGS**




STEP 1.1:

FROM THE MENU ON THE LEFT SELECT **GENERAL**, AND FROM THE MENU ON THE RIGHT YOU WILL SEE A HEADING NAMED **USE SIDE SWITCH TO**

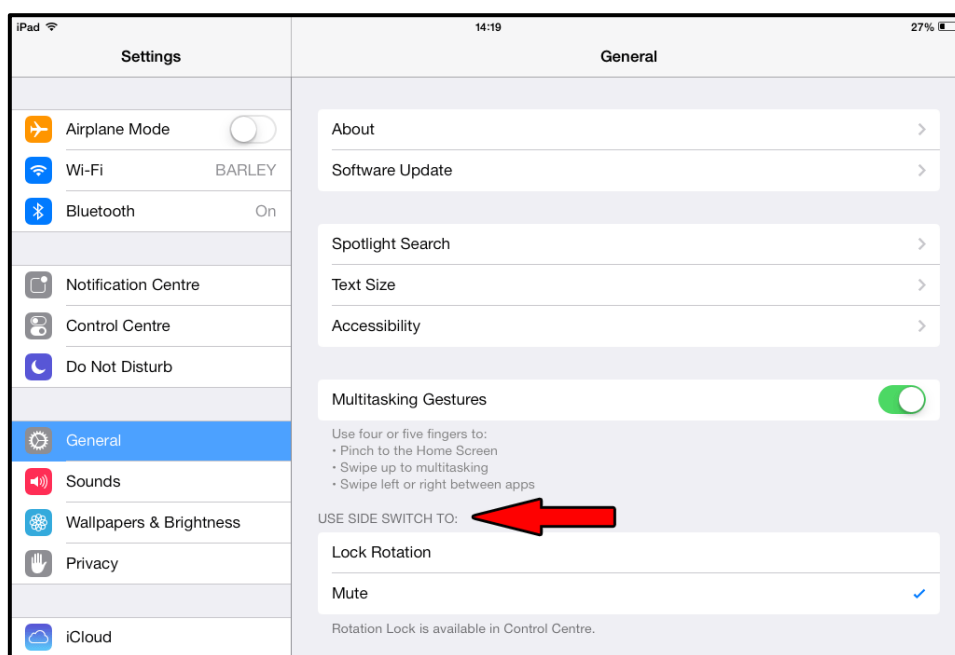

STEP 1.2:

YOU WILL NOTICE THAT THERE ARE TWO OPTIONS **LOCK ROTATION** AND **MUTE**. SIMPLY CHOSE THE OPTION YOU WANT AND A TICK WILL APPEAR TO CONFIRM THE SELECTION

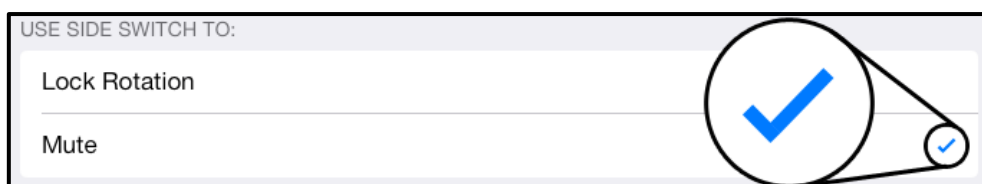

STEP 1.3:

TO FINALISE THE PROCESS PUSH THE **HOME BUTTON**



THE SIDE SWITCH


THE SIDE SWITCH IS A HANDY LITTLE BUTTON. THE FOLLOWING DETAILS HOW IT CAN BE USED

WHEN EITHER FUNCTION IS TURNED ON OR OFF YOU WILL GET A SMALL ICON APPEAR, IN THE MIDDLE OF THE SCREEN, TO ALERT YOU OF THIS.

LOCK ROTATION: **ON**




LOCK ROTATION: **OFF**

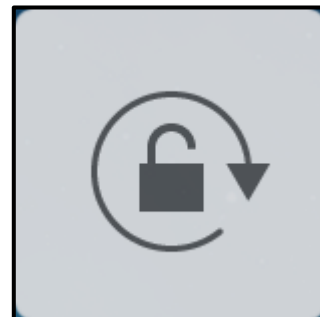

MUTE: **ON**



MUTE: **OFF**

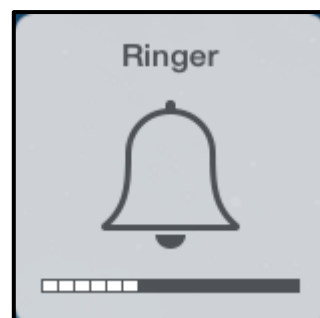

Note: SEE *IPAD USER GUIDE – SHORTCUTS*, FOR ANOTHER METHOD OF TURNING ON/OFF MUTE